


WeatherBond™ Pro ROOFING SYSTEM

← DECK SLOPE

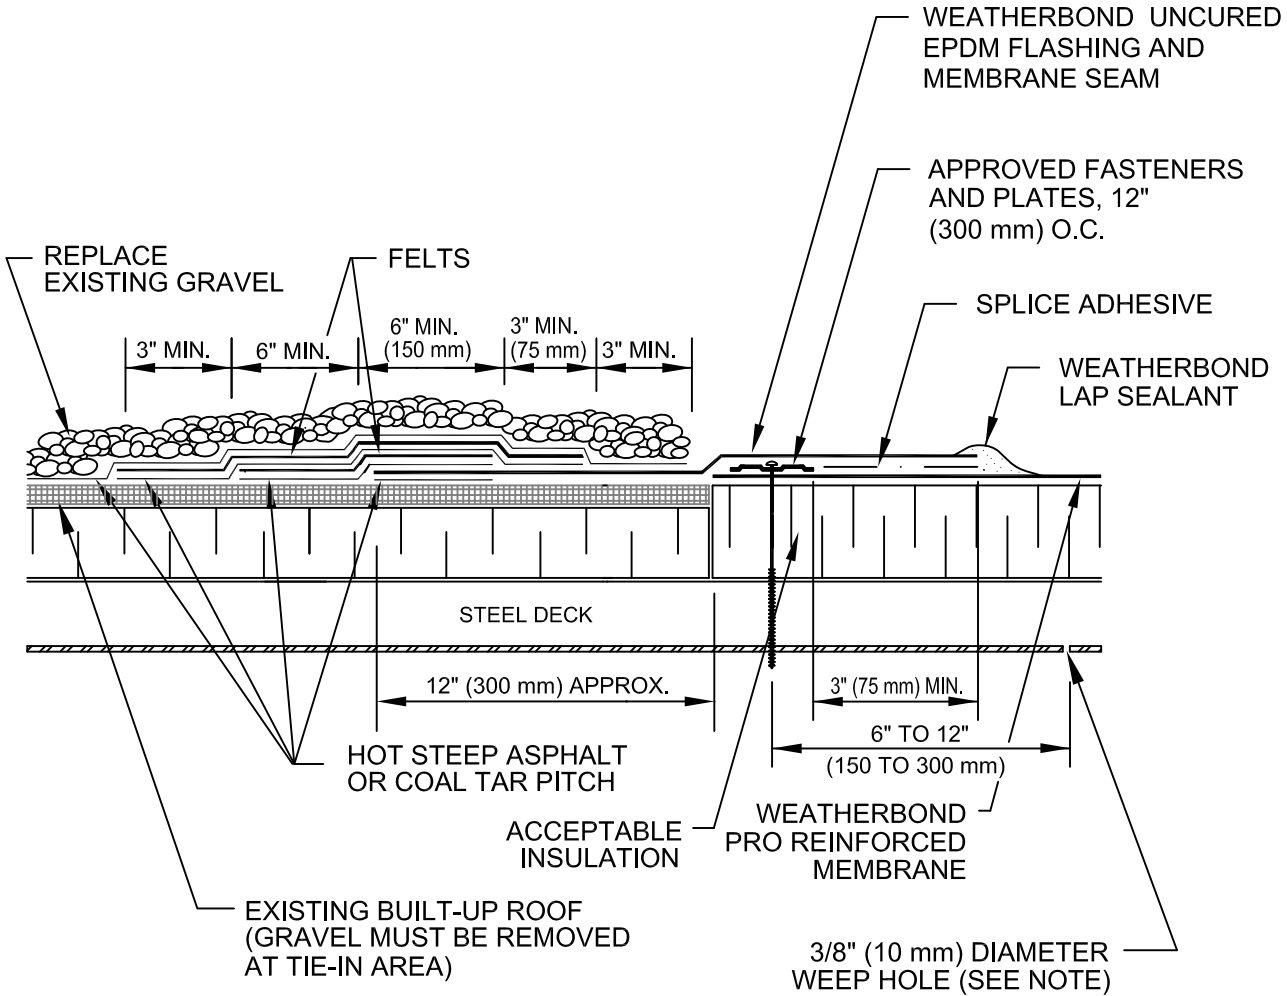

NOTE:

WHEN ROOF SLOPE IS TOWARD THE WEATHERBOND PRO ROOFING SYSTEM, DRILL A 3/8" (10 mm) DIAMETER WEEP HOLE IN THE BOTTOM FLUTES OF THE STEEL DECK ALONG THE PERIMETER OF THE TIE-IN 6" TO 12" (150 TO 300 mm) FROM THE FASTENING PLATES.

**WBPC-13.1
BUR TIE-IN/STEEL DECK**

