


# WeatherBond™ Pro ROOFING SYSTEM

DECK SLOPE →

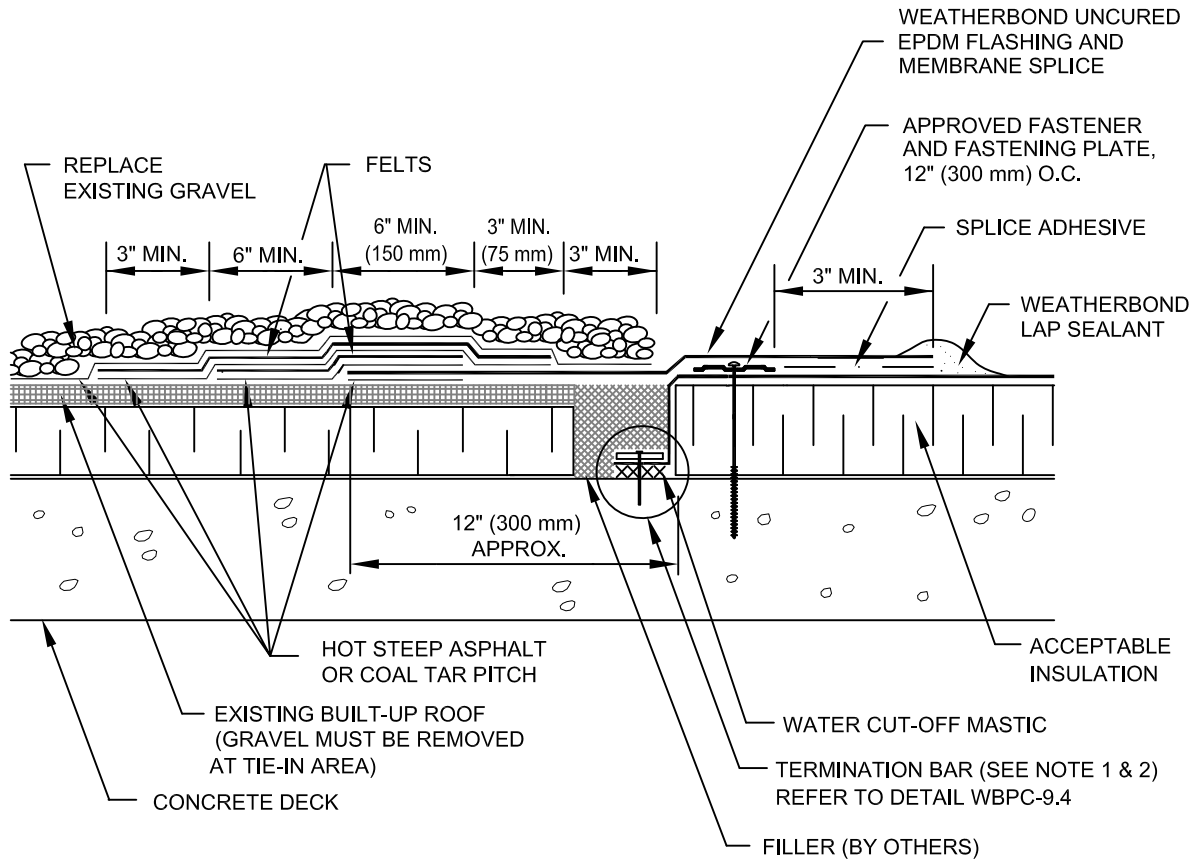

## NOTES:

1. THE USE OF THE TERMINATION BAR IS TO PREVENT MIGRATION OF WATER BENEATH THE WEATHERBOND PRO ROOFING SYSTEM.
2. TERMINATION BAR IS NOT REQUIRED WHEN EXISTING ROOF SLOPE IS TOWARD EXISTING ROOFING SYSTEM.
3. REFER TO "ATTACHMENT I" IN THE "APPLICATION" SECTION OF THE WEATHERBOND PRO SPECIFICATION FOR PROPER FASTENERS AND PLATES.

**WBPC-13.2**  
**BUR TIE-IN SLOPED TOWARD**  
**WEATHERBOND PRO/CONCRETE DECK**

**WEATHERBOND™**  
 © 2007 WEATHERBOND