


## WeatherBond™ Pro ROOFING SYSTEM

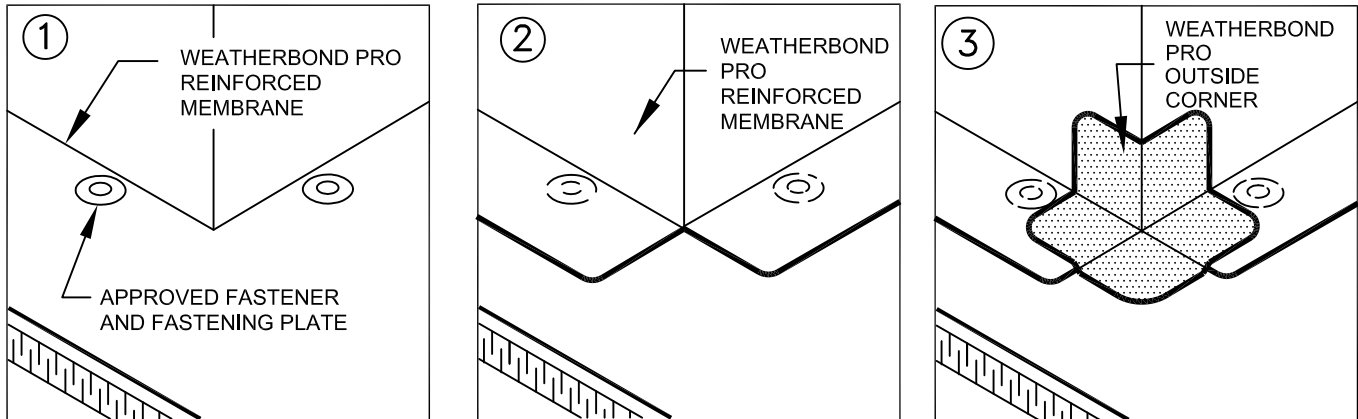

### NOTES:

1. BEGIN INSTALLATION OF FASTENING PLATES APPROXIMATELY 6" (150 mm) FROM CORNER.
2. POSITION FASTENING PLATES 1/2" TO 1" (13 mm to 25 mm) FROM EDGE OF DECK MEMBRANE.
3. APPROXIMATELY 1/8" (3 mm) DIAMETER BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGES OF WEATHERBOND PRO REINFORCED MEMBRANE.
4. REFER TO SPECIFICATION FOR ACCEPTABLE FASTENERS AND PLATES.

**WBPC-15.3**  
**PRE-MOLDED OUTSIDE CORNER**

**WEATHERBOND™**  
© 2007 WEATHERBOND