


WeatherBond™ Pro ROOFING SYSTEM

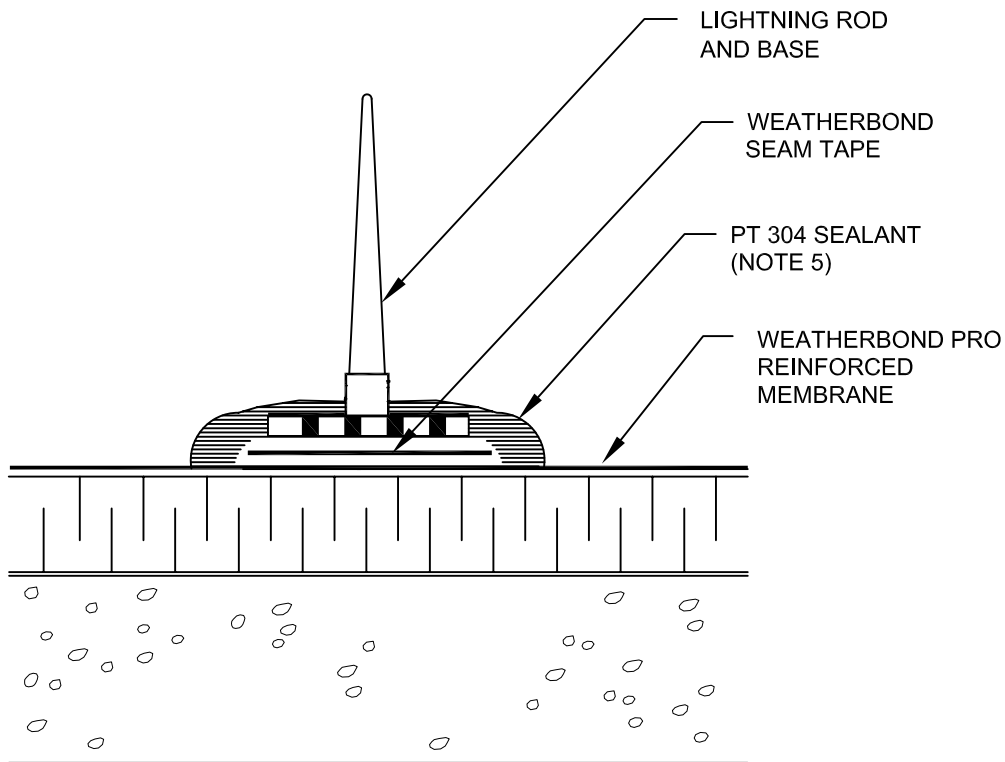

NOTES:

1. CLEAN EXPOSED MEMBRANE WITH WEATHERED MEMBRANE CLEANER.
2. APPLY SPLICE ADHESIVE OR PRIMER TO THE MEMBRANE AND LIGHTNING ROD BASE. ALLOW SPLICE ADHESIVE TO DRY UNTIL IT IS TACK FREE.
3. INSTALL A SECTION OF SEAM TAPE (APPROXIMATELY THE SIZE OF THE METAL BASE) TO THE MEMBRANE SURFACE. LEAVE THE RELEASE FILM IN PLACE AND ROLL TAPE FROM THE CENTER TO THE OUTER EDGES.
4. REMOVE RELEASE FILM AND CAREFULLY PLACE METAL BASE OVER SPLICE TAPE.
5. APPLY SPLICE ADHESIVE OR PRIMER TO WEATHERBOND PRO MEMBRANE WHERE PT 304 SEALANT IS TO BE APPLIED. ALLOW TO DRY UNTIL TACK FREE, SEAL ALL EDGES AND ANY EXPOSED AREAS OF TAPE (AT PERFORATED BASE) WITH PT 304 SEALANT.

WBPC-20.1
LIGHTNING ROD ATTACHMENT

WEATHERBOND™
© 2007 WEATHERBOND