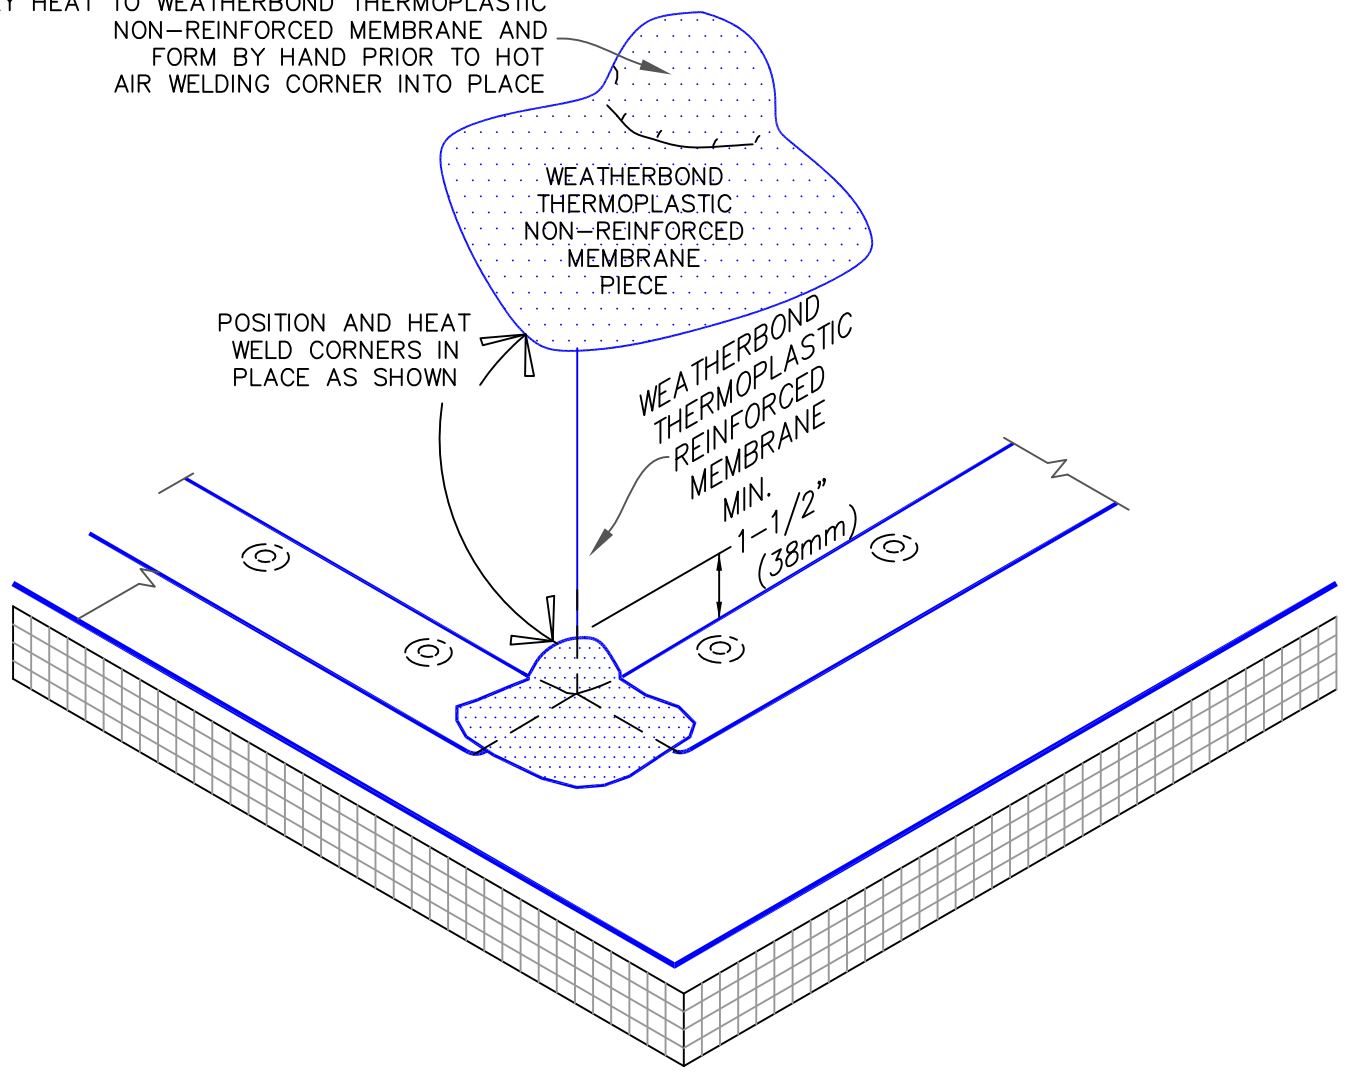





APPLY HEAT TO WEATHERBOND THERMOPLASTIC NON-REINFORCED MEMBRANE AND FORM BY HAND PRIOR TO HOT AIR WELDING CORNER INTO PLACE



FIELD FABRICATED OUTSIDE CORNER FLASHING

-  WEATHERBOND THERMOPLASTIC REINFORCED MEMBRANE
-  APPROVED SUBSTRATE
-  SEE NOTE

THERMOPLASTIC ROOFING SYSTEM
WBPC-15.5