


NOTES

1. RIDGE MEMBRANE ATTACHMENT IS ONLY REQUIRED WHEN ROOF SLOPE EXCEEDS 3" TO ONE HORIZONTAL FOOT [(25%),(14')].
2. POSITION FASTENING PLATES 1/2" (13mm) MINIMUM TO 1" (25mm) MAXIMUM FROM THE EDGE OF THE DECK MEMBRANE.
3. APPROXIMATELY 1/8" (3mm) DIAMETER BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGES OF WEATHERBOND REINFORCED TPO MEMBRANE AND RECOMMENDED ON CUT EDGES OF WEATHEROND PVC MEMBRANE.
4. REFER TO WEATHERBOND SPECIFICATIONS FOR REQUIRED NUMBER OF PERIMETER SHEETS, SHEET WIDTH AND MEMBRANE FASTENING DENSITY.
5. ON MECHANICALLY ATTACHED SYSTEMS, HPWX FASTENERS AND PLATES ARE REQUIRED OVER STEEL AND WOOD DECKS. ON CONCRETE DECKS, APPROVED CONCRETE FASTENERS ARE USED WITH HPWX PLATES.
6. AS AN OPTION TO USING PERIMETER SHEETS, 10" (254mm) WIDE TPO PEEL & STICK RPS MAY BE USED BENEATH TPO FIELD SHEETS ONLY FOR PERIMETER SECUREMENT.

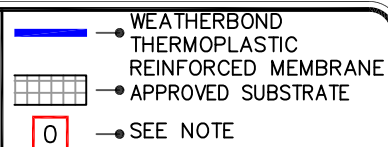

RIDGE MEMBRANE
ATTACHMENT



THERMOPLASTIC
ROOFING SYSTEM

WBPMA-22.0