


NOTES:

1. SPLICE TWO PIECES OF UNCURED EPDM OR PEEL & STICK UNCURED EPDM TOGETHER TO ACHIEVE DESIRED WIDTH.
2. DRILL A 3/8" (10mm) DIAMETER WEEP HOLE ON THE BOTTOM FLUTES OF THE STEEL DECK ALONG THE PERIMETER TO THE TIE-IN 6" (152mm) FROM THE SEAM FASTENING PLATE.
3. ON MECHANICALLY FASTENED SYSTEMS, HPWX FASTENERS AND POLYMER SEAM PLATES ARE REQUIRED OVER STEEL DECKS.
4. IF WATER PONDS OR FLOWS OVER TIE-IN FROM BUR SURFACE, USE [DETAIL WBRC-13.2](#).
5. ON BALLASTED SYSTEMS, USE CONCRETE PAVERS TO PREVENT BALLAST MIGRATION.

DIMENSIONS	mm	
(A)	5"	127 MIN.
(B)	2"	51 ± 1/2" (13mm)
(C)	6"	152 TO

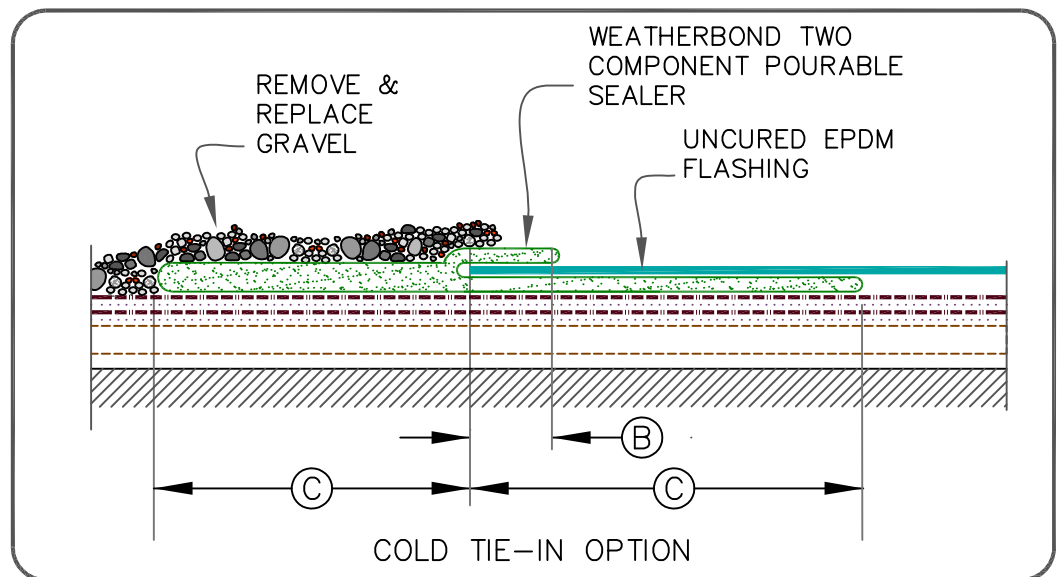

BUILT-UP ROOFING TIE-IN OVER STEEL ROOF DECK

- EPDM MEMBRANE
- APPROVED SUBSTRATE
- [0] — SEE NOTE

EPDM ROOFING SYSTEM

WBRC13.1