


NOTES:

1. REMOVE ALL LEAD AND OTHER FLASHING BEFORE INSTALLING FIELD-FABRICATED PIPE SEAL.
2. TEMPERATURE OF PENETRATION MUST NOT EXCEED 180°F (82°C).
3. WOOD NAILERS MUST EXTEND PAST TOTAL WIDTH OF METAL FLANGE.
4. EPDM PRIMER MUST BE APPLIED TO THE MATING SURFACES PRIOR TO APPLYING PEEL & STICK UNCURED EPDM FLASHING.
5. IN COLDER TEMPERATURES, A HEAT GUN MUST BE USED WHEN FORMING PEEL & STICK UNCURED EPDM FLASHING.

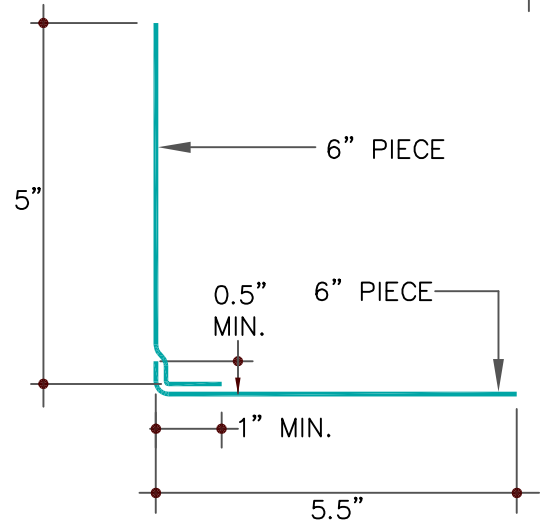

	mm
0.5"	= 13
1.0"	= 25
5.0"	= 127
5.5"	= 140
6.0"	= 152



FLEXIBLE PENETRATION

	EPDM MEMBRANE
	APPROVED SUBSTRATE
	SEE NOTE

EPDM ROOFING SYSTEM

WBRC-8.3