




POSITION MEMBRANE TO ALLOW AN APPROXIMATE 3" (76mm) OVERLAP. MARK THE BOTTOM SHEET WITH AN INDELIBLE MARKER 1/2" (13mm) FROM THE EDGE OF THE TOP SHEET AS SHOWN. THE PRE-MARKED LINE ON THE MEMBRANE EDGE CAN ALSO BE USED AS A GUIDE.

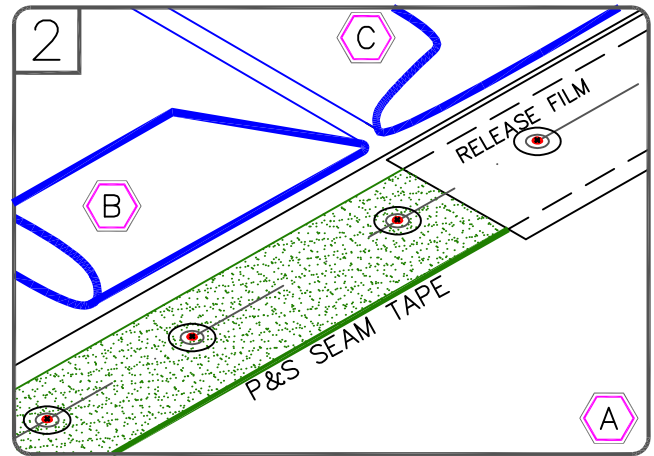


FOLD SHEETS BACK AS SHOWN. APPLY EPDM PRIMER TO THE SPLICE AREA ON BOTH SURFACES AND ALLOW TO PROPERLY DRY. APPLY P&S SEAM TAPE WITH RELEASE FILM ALIGNED WITH MARKER LINE.

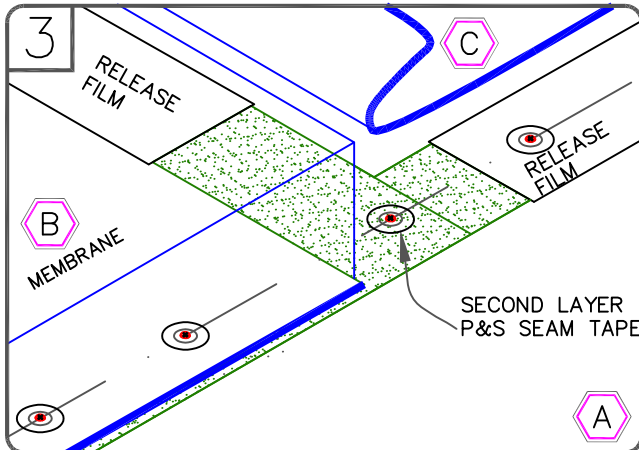

SPLICE SHEET B TO SHEET A AND APPLY SECOND PIECE OF P&S SEAM TAPE BETWEEN SHEET B AND C. TRIM RELEASE FILM AS SHOWN.

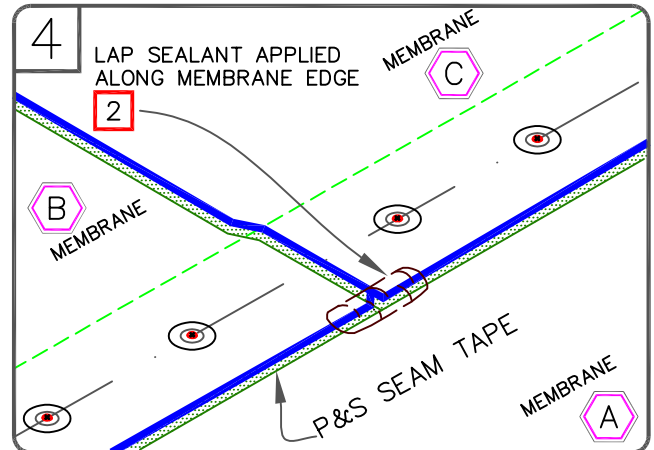

SPLICE SHEET C TO SHEET A AND B, PRESS TOP SHEET ONTO BOTTOM SHEET USING HAND PRESSURE TOWARDS THE OUTER EDGE OF THE SPLICE AND ROLL THE SPLICE AREA WITH A 2" (51mm) WIDE STEEL ROLLER.

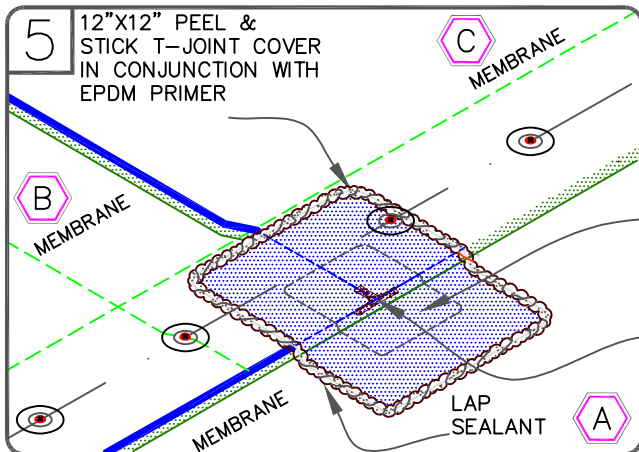

APPLY 6"x6" WEATHERBOND PEEL & STICK T-JOINT COVER AND 12"x12" PEEL & STICK T-JOINT COVER CENTERED OVER THE INTERSECTING POINT OF THE LEADING EDGES OF THE FIELD SPLICE INTERSECTION AS SHOWN.

6"x6" PEEL & STICK T-JOINT COVER IN CONJUNCTION WITH EPDM PRIMER

LAP SEALANT UNDER THE PATCH

NOTES:

1. APPLY LAP SEALANT AT CUT EDGES OF REINFORCED MEMBRANE.
2. APPLY LAP SEALANT ALONG THE EDGES OF THE MEMBRANE SPLICE COVERING THE EXPOSED SPLICE TAPE 1/2" (13mm) IN EACH DIRECTION FROM THE SPLICE INTERSECTION.



P&S SEAM TAPE SPLICE INTERSECTION

- REINFORCED EPDM—UNLESS NOTED OTHERWISE
- APPROVED SUBSTRATE
- SEE NOTE

MECHANICALLY ATTACHED EPDM  
WBRMA-2.3