

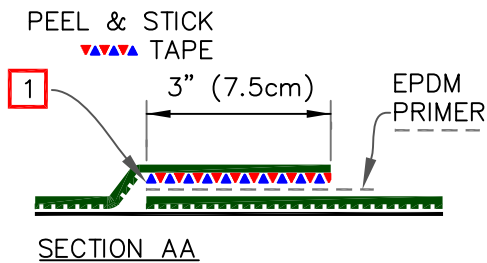
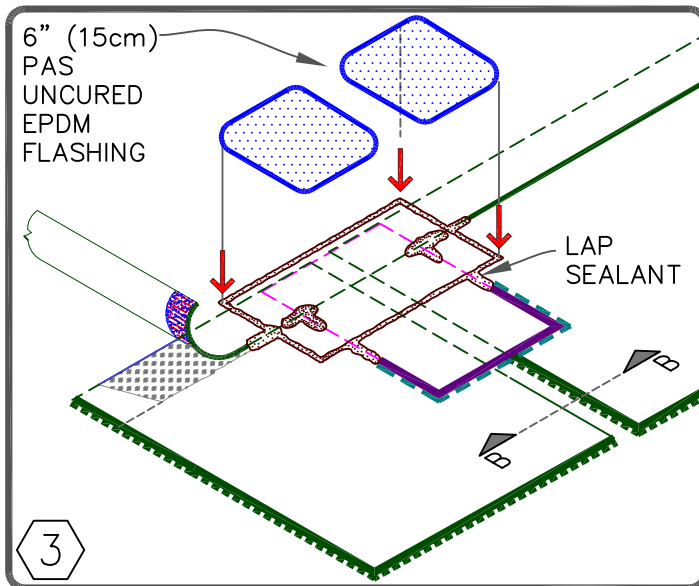
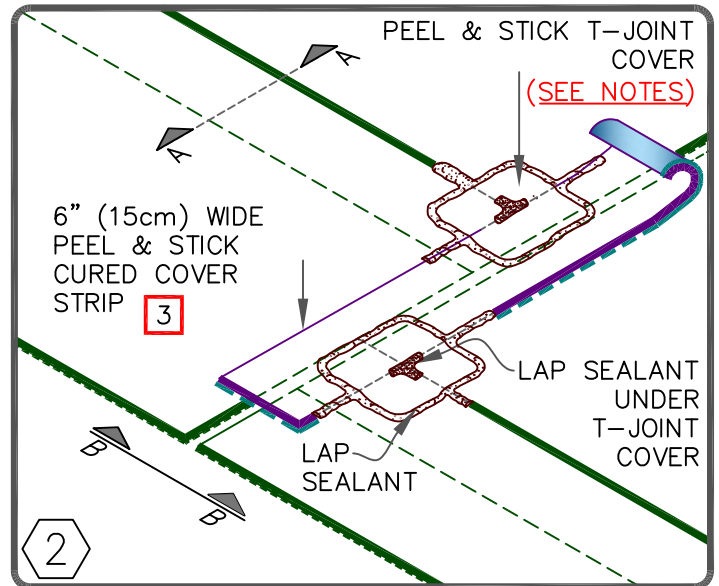


SIDE LAP SPLICE

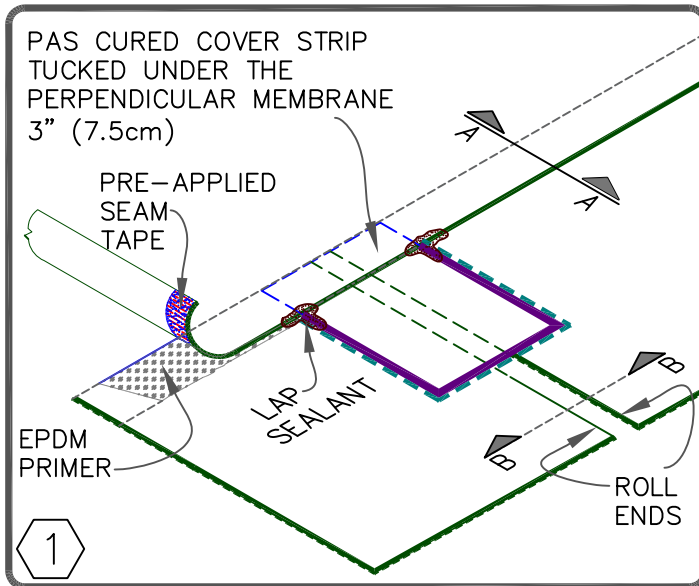

END LAP SPLICE

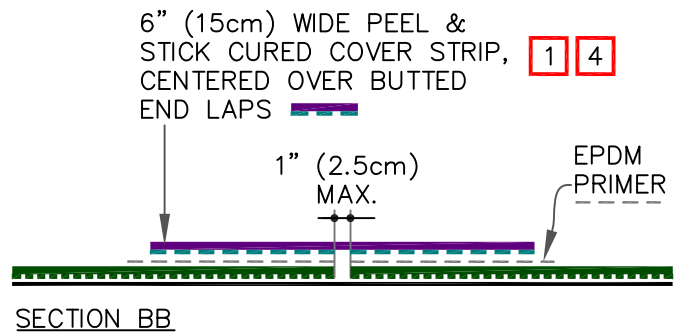

NOTES:

1. APPLY LAP SEALANT ALONG THE EDGE OF THE MEMBRANE SPLICE (UNDER THE 6"x6" T-JOINT COVER) COVERING THE EXPOSED SPLICE TAPE 1/2" (1.5cm) IN EACH DIRECTION FROM THE SPLICE INTERSECTION.
2. APPLY A 6"x 6" (15cm x 15cm) T-JOINT COVER OR PEEL & STICK UNCURED EPDM FLASHING AND LAP SEAL THE EDGES.
3. PEEL & STICK OVERLAYMENT STRIP CAN BE USED WHEN P&S IS OVERLAPPED A MINIMUM 1" (2.5cm) AND ELIMINATES THE NEED FOR T-JOINT COVERS.