


APPLY HEAT TO WEATHERBOND THERMOPLASTIC NON-REINFORCED MEMBRANE AND FORM BY HAND PRIOR TO HOT AIR WELDING CORNER INTO PLACE

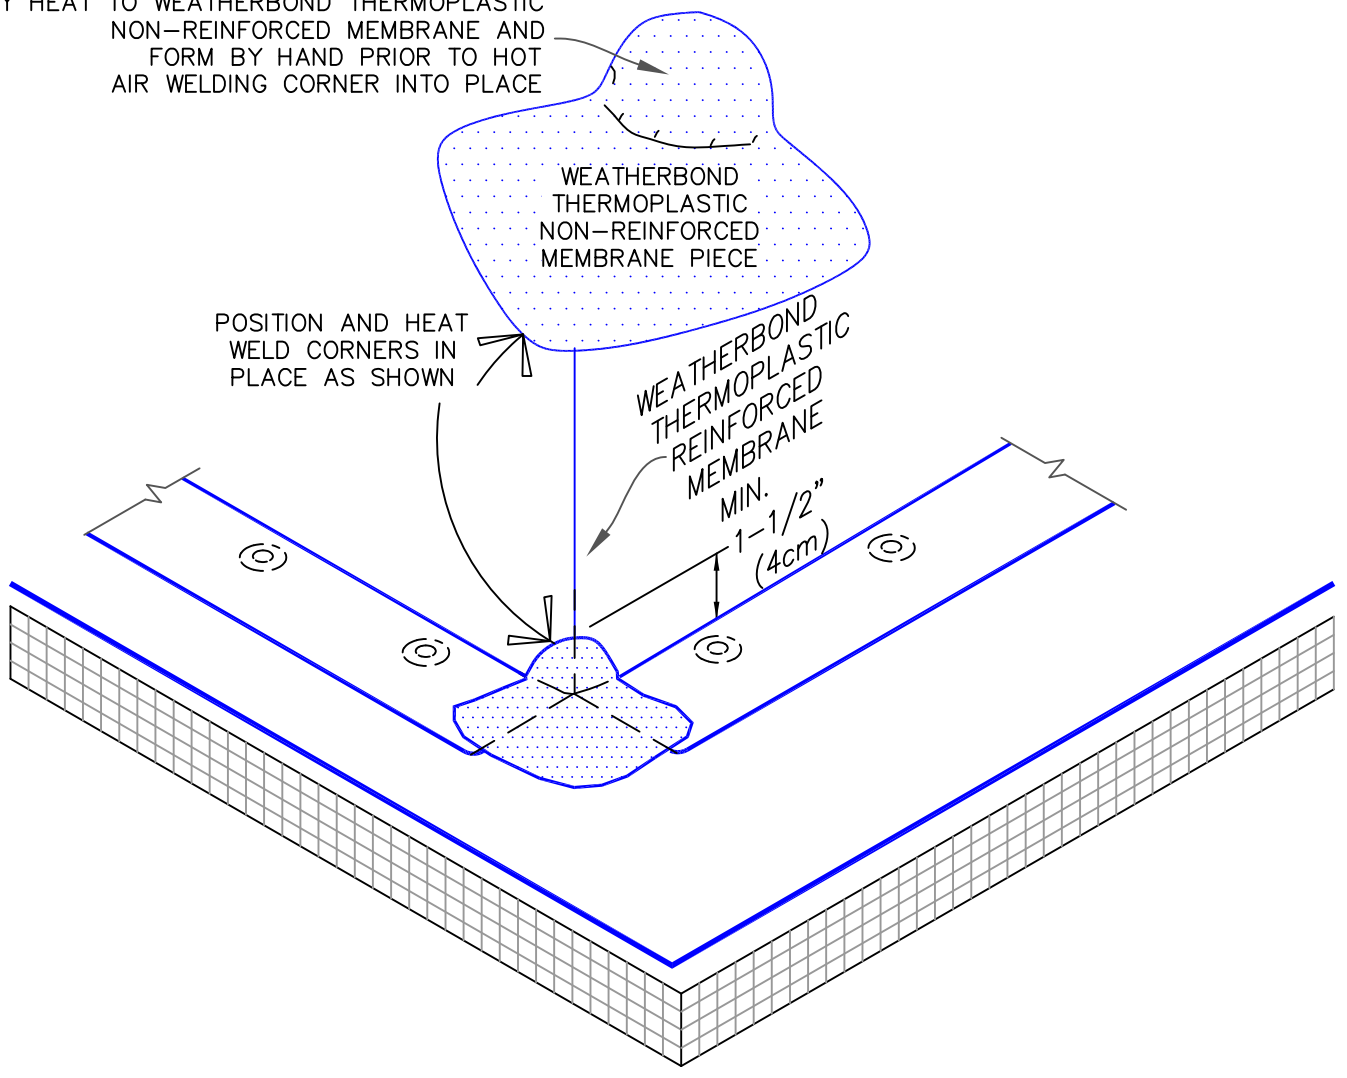

FIELD FABRICATED OUTSIDE CORNER FLASHING	<ul style="list-style-type: none"> WEATHERBOND THERMOPLASTIC REINFORCED MEMBRANE APPROVED SUBSTRATE SEE NOTE
--	--

THERMOPLASTIC ROOFING SYSTEM
WBPC-15.5