


NOTES:

1. WOOD NAILER MUST EXTEND PAST TOTAL WIDTH OF CURB FLANGE.
2. FOUR (4) CURB WRAP CORNERS WILL COMPLETELY FLASH A MAXIMUM CURB SIZE OF 3'X3' (91cmX 91cm). FOR LARGER CURBS USE THE TPO CURB WRAP CORNERS IN CONJUNCTION WITH ADDITIONAL SECTIONS OF WEATHERBOND TPO MEMBRANE.
3. IF CURB WRAP CORNER IS NOT USED, THEN USE [WBPC-15.7](#) DETAIL FOR OUTSIDE CORNERS.
4. APPROXIMATELY 1/8" (0.5cm) BEAD OF CUT-EDGE SEALANT IS REQUIRED ON THE CUT EDGES OF THE TPO FIELD WRAP CORNER.
5. REFER TO WEATHERBOND SPECIFICATIONS FOR ACCEPTABLE WEATHERBOND FASTENERS AND PLATES.
6. CUSTOM SIZES ARE AVAILABLE FOR CURB FLASHING HEIGHTS GREATER THAN 12" (30cm).
7. APPLICABLE BONDING ADHESIVE FOR PVC OR TPO. IN CASE OF TPO, CAV-GRIP III ADHESIVE MAY ALSO BE USED ON VERTICAL PORTION.

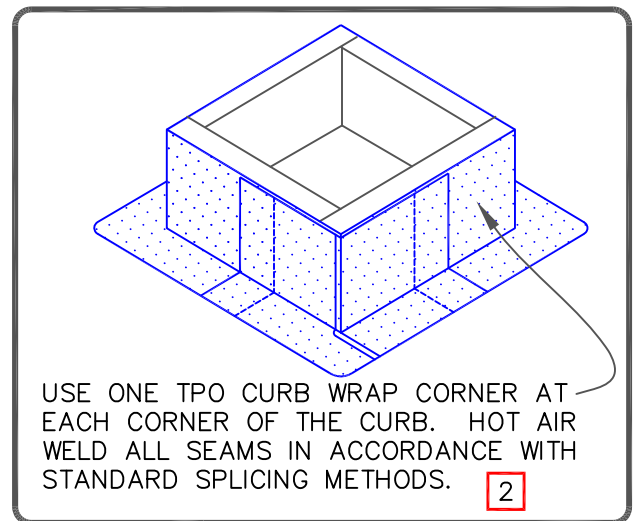

SELF-FLASHING CURB

	WEATHERBOND THERMOPLASTIC REINFORCED MEMBRANE
	APPROVED SUBSTRATE
	SEE NOTE

THERMOPLASTIC ROOFING SYSTEM

WBPC-5.4