


TABLE: FASTENER TYPES ON MECHANICALLY FASTENED ROOF ASSEMBLY

| DECK TYPE | FASTENERS | PLATES |
|-------------|----------------------------|--------|
| STEEL, WOOD | HPWX | HPWX |
| CONCRETE | APPROVED CONCRETE FASTENER | |

NOTES:

1. REMOVE ALL EXISTING LEAD AND FLASHING MATERIAL BEFORE INSTALLING PRE-FABRICATED SQUARE TUBE WRAP.
2. TEMPERATURE OF THE PIPE PENETRATION MUST NOT EXCEED 140°F (60°C) WHEN USING PVC AND 160°F (71°C) WHEN USING TPO FLASHING.
3. INSTALL A MINIMUM OF 4 SEAM FASTENING PLATES FOR TUBE SIDE DIMENSIONS UP TO 6" (15cm).
4. FASTENERS AND PLATES ARE NOT REQUIRED ON ADHERED SYSTEM. SEE TABLE FOR MF SYSTEM.
5. APPROXIMATELY 1/8" (0.5m) DIAMETER BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGES OF WEATHERBOND REINFORCED TPO MEMBRANE.

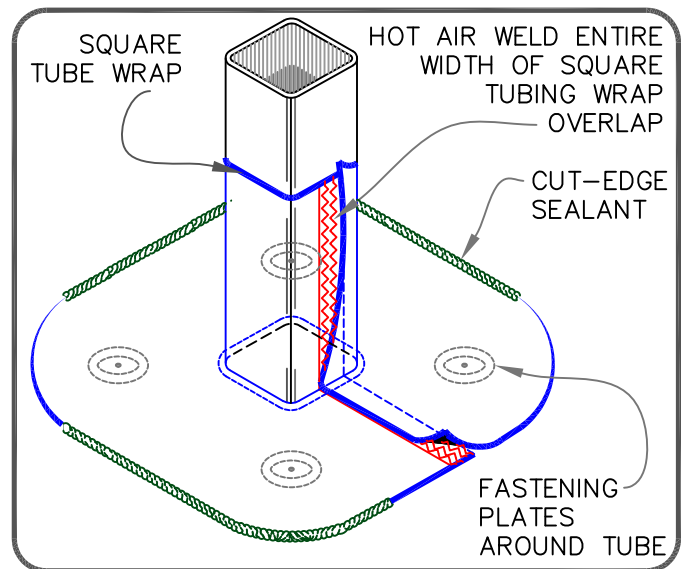

6. T-JOINT COVERS ARE NOT REQUIRED ON STANDARD COLORS (WHITE, TAN, GRAY), FOR ADDITIONAL COLORS IT IS REQUIRED TO COVER T-JOINTS.



PRE-FABRICATED SQUARE TUBE WRAP

- WEATHERBOND THERMOPLASTIC REINFORCED MEMBRANE
- APPROVED SUBSTRATE
- SEE NOTE

THERMOPLASTIC ROOFING SYSTEM

WBPC-8.3