


NOTES:

1. REMOVE ALL GRAVEL AT TIE-IN.
2. SPLICE TWO PIECES OF UNCURED EPDM OR PEEL & STICK UNCURED EPDM TOGETHER TO ACHIEVE DESIRED WIDTH.
3. WATER CUT-OFF MUST BE UNDER CONSTANT COMPRESSION.
4. WEATHERBOND IS NOT RESPONSIBLE FOR DAMAGE TO THE BUILT-UP ROOF OR STRUCTURAL DECK RESULTING FROM PONDED WATER; THIS DETAIL APPLIES TO RE-ROOFING WHEN A TEAR-OFF IS NOT SPECIFIED AND WAS DESIGNED TO PREVENT MIGRATION OF WATER INTO THE NEW ROOFING SYSTEM.
5. ON BALLASTED SYSTEMS, USE CONCRETE PAVERS TO PREVENT BALLAST MIGRATION.

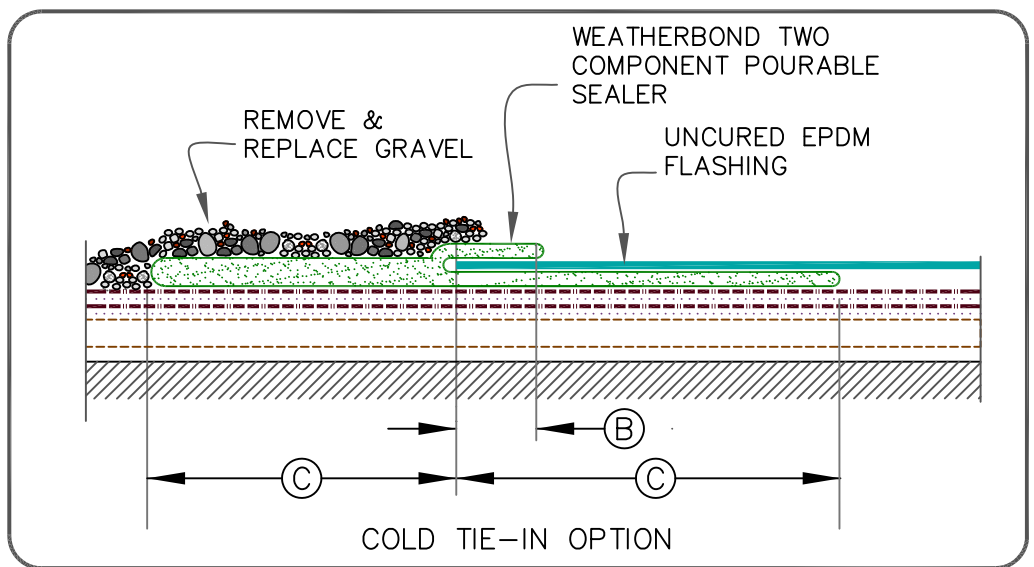

DIMENSIONS	cm	
(A)	5"	13 MIN.
(B)	2"	± 1/2" (1.5cm)
(C)	6"	15



BUILT-UP ROOFING TIE-IN OVER CONCRETE ROOF DECK

- EPDM MEMBRANE
- APPROVED SUBSTRATE
- 0 SEE NOTE

EPDM ROOFING SYSTEM

WBRC-13.2