


NOTES:

1. INSTALL R-TECH RECOVER BOARD WITH CONTINUOUS SIDE JOINTS AND END JOINTS STAGGERED SO THEY ARE OFFSET BY A MINIMUM OF 12" (305mm) FROM THE END JOINTS IN ADJACENT ROWS.
2. INSULATION SHOULD ABUT TIGHTLY AGAINST ADJACENT BOARDS.
3. IF R-TECH FANFOLD RECOVER BOARD IS BEING INSTALLED OVER AN EXISTING LAYER OF INSULATION, ALL JOINTS MUST BE OFFSET A MINIMUM OF 6" (152mm) BETWEEN LAYERS.
4. FASTENERS SHOULD NEVER BE CLOSER THAN 6" (152mm) FROM THE EDGES OF THE BOARD.
5. CARE MUST BE TAKEN TO AVOID OVERDRIVING OR UNDER-DRIVING THE FASTENER AND PLATE ASSEMBLY.
6. METALLIC FACER PERMITS THE USE OF R-TECH RECOVER BOARD UNDER EPDM MECHANICALLY ATTACHED ASSEMBLIES IN NORTHERN CLIMATES (CONTACT WEATHERBOND FOR ACCEPTANCE).

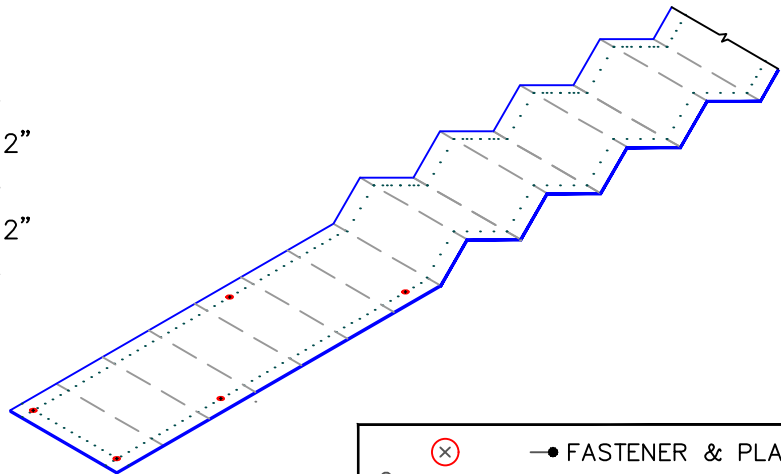

	FASTENER & PLATE
	CENTER LINE
	GUIDE LINE

FEET TO MILLIMETERS	
4'	8'
1219	2438

		INCHES TO MILLIMETERS																			
inch		1/8"	1/4"	15/32"	1/2"	5/8"	3/4"	1"	1.5"	2"	2.5"	3"	4"	6"	8"	9"	11"	12"	18"	24"	36"
mm		3	6	12	13	16	19	25	38	51	63	76	102	152	203	229	279	305	457	610	914

WEATHERBOND
Roofing Systems
© 2016 WeatherBond

R-TECH FANFOLD ROOF UNDERLAYMENT

MECHANICALLY ATTACHED SYSTEM
MA-27.3