


WeatherBond TPO

Prefabricated Sealant Pockets

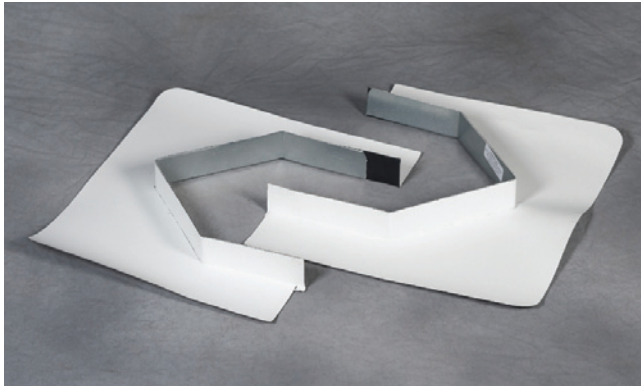

Overview

Let WeatherBond simplify your next WeatherBond TPO installation with Prefabricated Sealant Pockets. WeatherBond's TPO Prefabricated Sealant Pockets consist of a two-piece, prefabricated design that utilizes reinforced TPO membrane and coated metal to form a rigid, oversized sealant pocket. A weldable horizontal deck flange is fabricated from reinforced TPO membrane. The vertical wall consists of reinforced TPO membrane pre-welded to coated metal. White One-Part Pourable Sealer is used to fill the pocket to create a watertight seal.

WeatherBond's Prefabricated Sealant Pockets are part of the Certified Fabricated Accessory (CFA) program. Certified Fabricated Accessories are the only factory-fabricated TPO accessories that meet the stringent quality tolerances required to be in a WeatherBond roofing system.

Features and Benefits

- Provides substantial labor savings compared to field-fabricating a sealant pocket from coated metal or other material
- Provides a reliable method for waterproofing large, odd-shaped penetrations
- Professional finished appearance

Installation

1. Clean the inside surfaces of the TPO Prefabricated Sealant Pocket, the underside of the deck flange and the deck membrane with Weathered Membrane Cleaner. (Use a Primer Pad with the cleaner if the membrane has been exposed for an extended period of time.)
2. Place the TPO Prefabricated Sealant Pocket around the penetration(s), overlapping the two sections of the pocket.
3. Cut a piece of cardboard (approximately 4" x 4") and place between the overlapping area of the TPO Prefabricated Sealant Pocket and the deck membrane. The cardboard prevents the pocket from fusing to the membrane when first welding the overlaps.
4. Using a hand-welder, weld the angle change in overlap area. Using the end of a seam probe assists in this process. The hand-welder temperature setting should be between 6 and 7.
5. Hand-weld the remainder of the horizontal overlap.
6. Position the TPO Prefabricated Sealant Pocket so the vertical overlap is against the penetration. This will allow proper pressure to be applied to the overlap with the 2" silicone roller.
7. Weld both vertical overlaps, starting at the angle change and progressing to the top of the pocket.
8. Once the vertical overlaps are complete, re-position the pocket and tack-weld the flange to the membrane to hold it in place.
9. Weld the entire horizontal flange to the deck membrane.
10. Using a seam probe, check all splices for voids and cold-welds once the flashing has thoroughly cooled. Make any necessary repairs.
11. Apply a thin coat of TPO Primer to the TPO membrane and penetration(s) surfaces only using a small paintbrush. Do not apply TPO Primer to the galvanized metal surface utilized on the inside of the Sealant Pocket.
12. Fill the pocket with White One-Part Pourable Sealer. Use an adequate amount of sealant to ensure that contact is made with the top rim of the pocket.

REVIEW CURRENT WEATHERBOND INSTALLATION INSTRUCTIONS FOR SPECIFIC INSTALLATION REQUIREMENTS.



WEATHERBOND
ROOFING SYSTEMS

Single-Ply Simplified

Precautions

1. Temperature of penetration shall not exceed 160°F (71°C).
2. Apply TPO Primer to the TPO membrane and penetration(s) surfaces only. Do not apply TPO Primer to the galvanized metal surface utilized on the inside of the sealant pocket.
3. WeatherBond's White One-Part Pourable Sealer must completely fill sealant pocket.
4. The walls of the sealant pocket must be a minimum of 1" from any penetration.
5. UV-filtering sunglasses are strongly recommended when working on TPO Roofing Systems.
6. Store sealant pockets in a cool, shaded area and cover with light-colored, breathable, waterproof tarpaulins. Prefabricated Sealant Pockets or membrane that have been exposed to the weather must be prepared with Weathered Membrane Cleaner prior to hot-air welding. (Primer pads must be used if the membrane has been exposed for an extended period of time.)


LEED® Information

Pre-consumer Recycled Content	0%
Post-consumer Recycled Content	0%
Manufacturing Location	Michigan Center, MI
Solar Reflectance Index (SRI)	N/A

Typical Properties and Characteristics

Property	Value
Packaging	2 pockets/carton
Size and Dimensions	See drawing and table below.
Weight (each)	12" – 3.0 lbs (1.36 kg)
Material	Reinforced TPO and coated metal
Color	White
Volume (Less Penetration)	12" – 1.87 gallons (7.1 liters)

Typical properties and characteristics are based on samples tested and are not guaranteed for all samples of this product. This data and information is intended as a guide and does not reflect the specification range for any particular property of this product.

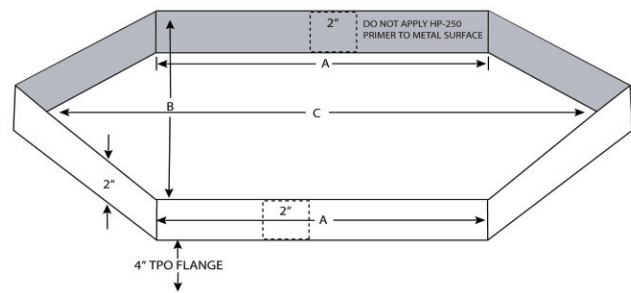

Pocket Size	Dimensions		
	A	B	C
12" (30.48 cm)	12" (15.24 cm)	12" (30.48 cm)	24" (60.96 cm)



WEATHERBOND
ROOFING SYSTEMS

Single-Ply Simplified

P.O. Box 251 | Plainfield, PA 17081 | 866.471.5125 | FAX: 717.960.4034 | www.weatherbondroofing.com

© 2023 WeatherBond. 10.03.23 WB-4335 - "TPO Prefabricated Sealant Pockets Technical Data Bulletin"
WeatherBond is a trademark of WeatherBond. LEED is a registered trademark of the U.S. Green Building Council.