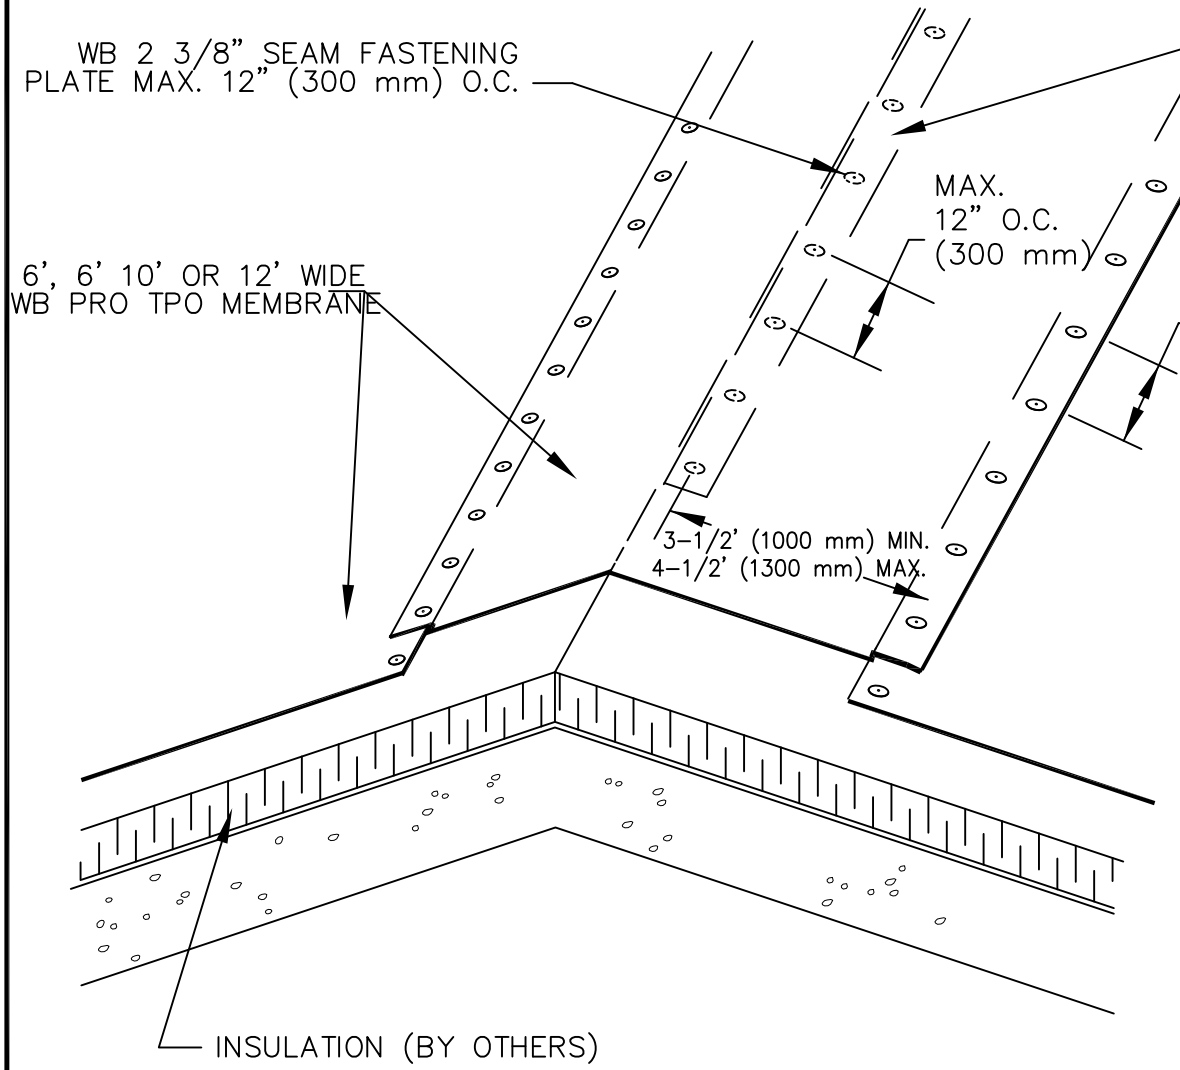

NOTES:

1. RIDGE MEMBRANE ATTACHMENT IS ONLY REQUIRED WHEN ROOF SLOPE EXCEEDS 3" TO THE HORIZONTAL FOOT (75 mm/300 mm).
2. REINFORCED TPO MEMBRANE SHALL BE INSTALLED PARALLEL WITH RIDGE LINE (WITH MEMBRANE CENTERED OVER THE RIDGE LINE) AS SHOWN.
3. FOR PROPER MEMBRANE ATTACHMENT AND SPLICING, REFER TO WFMA-2 DETAILS.

WFMA-22.2

RIDGE MEMBRANE ATTACHMENT

WEATHERBOND™

©2009 WEATHERBOND